

GPS Mode

There are two methods for marking waypoints.

- Basic (to select your current position)
- Advanced (to input desired destinations)

Basic Waypoint Selection


To Mark Your Present Position:

1. Turn the ignition switch ON (1).
2. Use the GPS button to select the GPS mode.
3. To select a higher waypoint number (1), press and release the plus button (2).

To select a lower waypoint number, press and release the minus button (3).

To fast scroll, press and hold the plus or minus button until the desired waypoint number appears.

4. Press and hold the WP button (4) for about 2 seconds, until the waypoint number flashes. Then release the button.

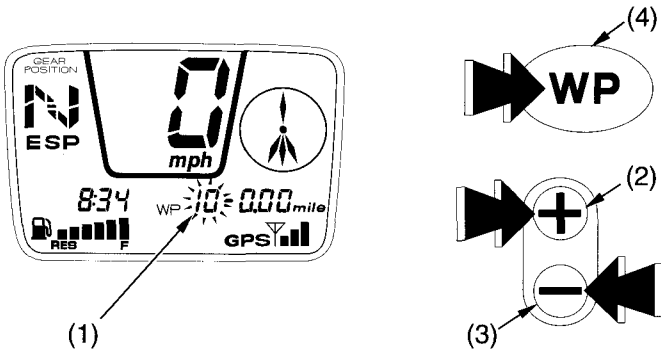

(1) waypoint number
(2) plus button

(3) minus button
(4) WP button

(cont'd)