

Maintenance Schedule

ITEMS		FREQUENCY	WHICHEVER COMES		INITIAL MAINT.	REGULAR MAINT. INTERVAL		Refer to page
			FIRST	mi	100	600	1200	
			⇔	km	150	1000	2000	
			NOTE	HOURS	20	100	200	
NON EMISSION RELATED ITEMS		DRIVE SHAFT BOOTS						195
		REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL				(R:EVERY 2 YEARS)		152 154
	*	BRAKE FLUID	NOTE 3					176
	*	BRAKE SHOES WEAR	NOTE 1					179
	*	BRAKE PADS WEAR	NOTE 1,2					185
		BRAKE SYSTEM						176
		SKID PLATE, ENGINE GUARD						194
	*	SUSPENSION						—
	*	SPARK ARRESTER				C	C	174
	*	NUTS, BOLTS, FASTENERS						—
	**	WHEELS/TIRES						—
	**	STEERING SHAFT HOLDER BEARINGS						—
	**	STEERING SYSTEM						—

- * Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 252).
- ** In the interest of safety, we recommend these items be serviced only by your Honda dealer.