



Indicators & Displays

Odometer/Tripmeter


The odometer/tripmeter display has two functions, odometer (1) and tripmeter.

The tripmeter has two sub modes, tripmeter A (2) and tripmeter B (3).

The odometer registers total distance traveled in kilometers while the ignition switch is ON (1).

The tripmeter shows mileage per trip while the ignition is ON (1).

To change the display from tripmeter A or tripmeter B to odometer, press and release the odometer/tripmeter select button (4).

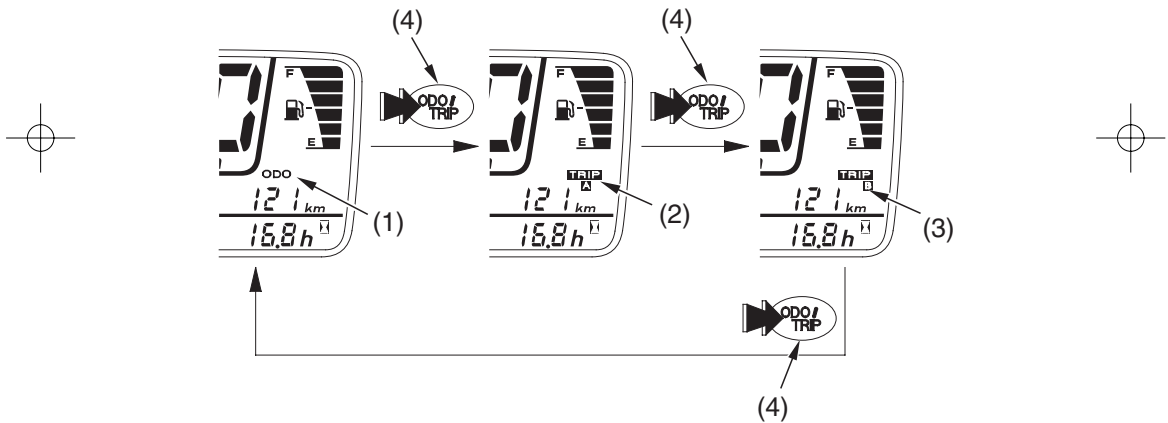

(1) odometer
(2) tripmeter A

(3) tripmeter B
(4) odometer/tripmeter
select button

