



Engine Oil & Filter

Crankcase Oil Level Check

Check the crankcase oil level if the oil level is below the lower level mark on the oil filler cap/dipstick (page 95).


Do not check the oil level immediately after the engine has been operated at high speeds because the oil level reading will be inaccurate.

Remove the oil check bolt (4) and sealing washer (5). Check that the sealing washer is in good condition. If necessary, replace the sealing washer.

- If oil flows out of the check bolt hole, install and tighten the oil check bolt and sealing washer, and proceed to the *Oil Tank Level Check* (page 97).
- If oil does not flow out of the check bolt hole, install and tighten the oil check bolt and sealing washer, and add the recommended engine oil to the oil tank up to the lower level mark on the oil filler cap/dipstick (page 95). Then proceed to the *Oil Tank Level Check* (page 97).



RIGHT SIDE

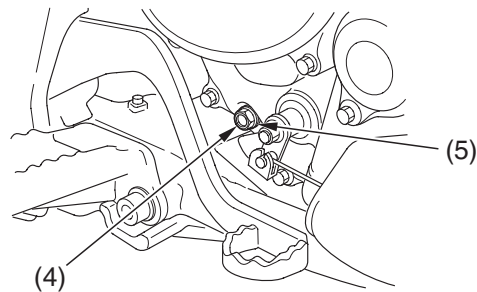

(4) oil check bolt

(5) sealing washer

