



## Drive Chain

### Adjustment

Refer to *Safety Precautions* on page 77.

1. Loosen the final case nut (1) while holding the final case bolt (2).
2. Turn both the right and left chain adjusters (3) equally to increase (A) or decrease (B) chain slack. Adjust the chain slack at a lower drive chain point midway between the sprockets.
3. After adjusting, be sure the same adjuster index marks (4) align with the stopper bolts (5) on both sides of the final case.
4. Recheck drive chain slack (page 143).
5. Tighten the final case nut to the specified torque while holding the final case bolt:  
**88 N·m (9.0 kgf·m , 65 lbf·ft)**

If a torque wrench is not used for installation, see your Honda dealer as soon as possible to verify proper assembly.

REAR

