

Rear Brake/Parking Brake Lever

The left brake lever (1) applies the brake to the rear wheels only. The left brake lever has the added feature of a lock (2) which allows the lever to be used as a parking brake.


Pull the left brake lever back and lock it with the lock. Always apply the parking brake when parking the FOUR TRAX and when starting the engine.

The parking brake is unlocked by squeezing the left brake lever.

The front brake lever is at the right handlebar grip.

NOTE:

- * Use of the parking brake in freezing weather may cause the brakes to freeze in the locked position.

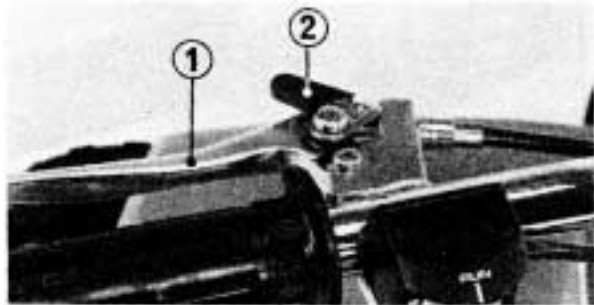


(1) Rear brake/Parking brake lever (2) Lock

Neutral Indicator

The neutral indicator (1) is on the left crankcase cover, just behind the recoil starter. This feature enables the rider to verify that the transmission is in neutral before starting the engine.

The indicator rotates as the gears are changed. When the indicator aligns with the N mark on the crankcase, the transmission is in neutral.

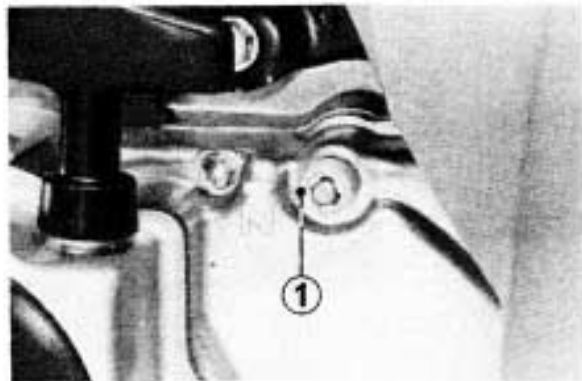

(1) Neutral indicator