

## **PARKING**

1. Stop the vehicle, shift the transmission into neutral, turn the fuel valve, fuel cap lever, and engine stop switch OFF.
2. Pull the rear brake/parking brake lever back and lock it. (See page 16.)
3. Lock the steering to help prevent theft.