


## Rear Brake Lever/Parking Brake

Free play, measured at the tip of the rear brake lever (1), should be 15–20 mm (5/8–3/4 in).

Adjust by turning the adjusting nut (2) located on the brake operating rod at the rear of the frame.

### NOTE:

- \* Make sure the cut-out on the adjusting nut is seated on the brake arm pin.

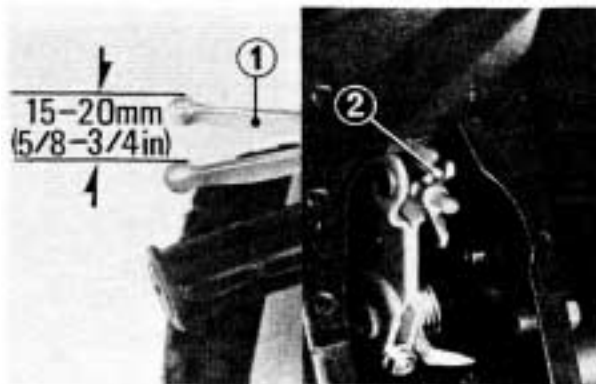

(1) Rear brake lever

(2) Adjusting nut

## Other Checks:

Check the brake cable for kinks or signs of wear that could cause sticking or failure.


Lubricate the brake cable with a commercially available cable lubricant to prevent premature wear or corrosion.

Make sure the brake arm, spring, rod and fasteners are in good condition.

### Wear Indicator:

When the brake is applied, an arrow (3) attached to the brake arm (4) moves toward a reference mark (5) on the brake panel.

If the arrow aligns with the reference mark on full application of the brake, the brake shoes must be replaced. See your authorized Honda dealer for this service.

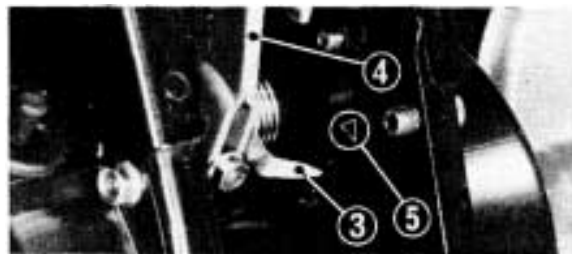

(3) Arrow

(4) Brake arm

(5) Reference mark