

STARTING THE ENGINE




WARNING

- * *Never run the engine in a closed area. The exhaust contains poisonous carbon monoxide gas that may cause loss of consciousness and lead to death.*
- * *Do not try to start the engine with the transmission in gear. You may injure yourself or damage the vehicle.*

NOTE:

- * The engine will not start unless the transmission is in NEUTRAL.

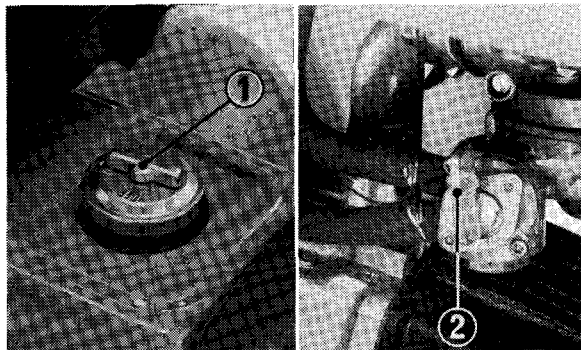


(1) Fuel cap lever

(2) Fuel valve

Starting Procedure

1. Select a level surface and lock the parking brake before starting the engine.
2. Turn the fuel cap lever (1) and fuel valve (2) to ON.
3. Move the engine stop switch (3) to RUN.
4. Make sure that the transmission is in neutral by depressing the shift lever and checking that the neutral indicator (4) is at N.

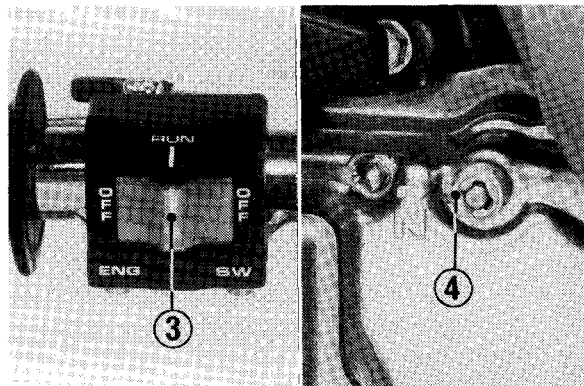

(3) Engine stop switch

(4) Neutral indicator