

PARKING

1. Stop the vehicle, shift the transmission into neutral, turn the fuel valve, fuel cap lever, and engine stop switch OFF.
2. Pull the rear brake/parking brake lever back and lock it. (See page 14.)
3. Lock the steering to help prevent theft.

WARNING

- * *Do not park on an incline. If you must park on a hill, place the TRX across the incline so that it neither faces downhill nor uphill.*