

Choke Lever

The choke lever (Fig. 2-7) is on the left side of the carburetor. The choke has two positions: on (A), and off (B).

Raising the choke lever will close the choke valve. When the lever is raised, the carburetor delivers a rich fuel mixture for starting the engine when cold. Lower the lever to open the choke valve as the engine attains normal operating temperature.

CAUTION:

Extended use of the choke may impair piston and cylinder wall lubrication and shorten the life of the engine.

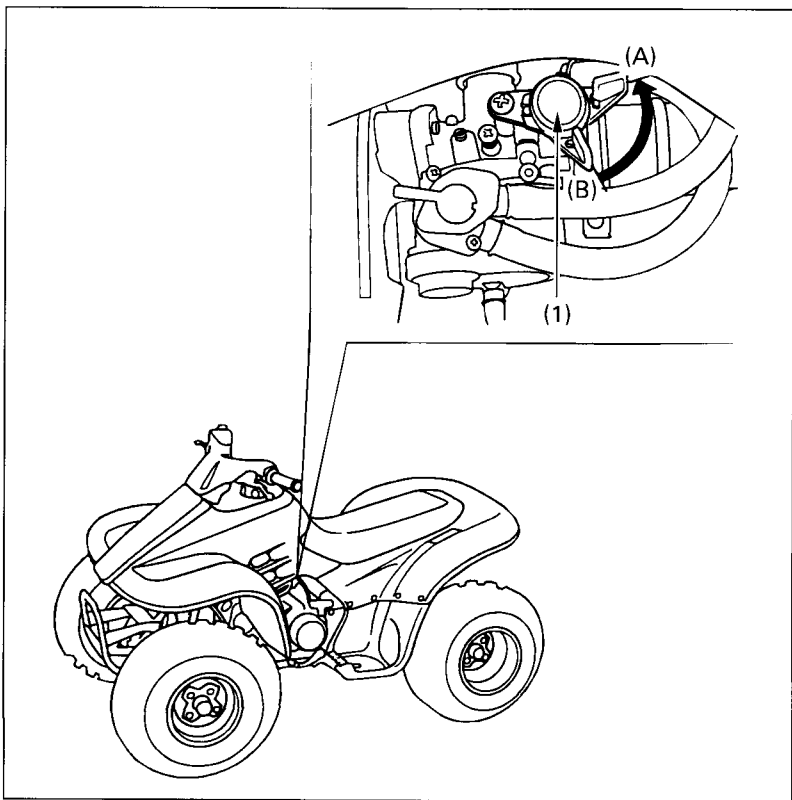


Fig. 2-7 (1) Choke lever

(A) On position
(B) Off position