


Operating Control

Engine Stop Switch

The engine stop switch (1) is used to stop the engine in an emergency. To operate, press the switch to either OFF position. The switch must be in the RUN position to start the engine, and it should normally remain in the RUN position even when the engine is OFF.

LEFT HANDLEBAR

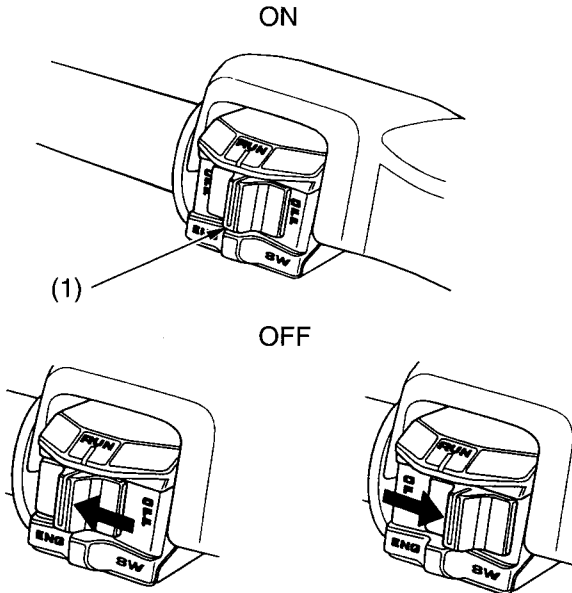

(1) engine stop switch