

Throttle

3. Slide the rubber sleeve (5) back to expose the throttle cable adjuster (6).
4. Loosen the lock nut (7).
5. Turn the adjuster to obtain the correct freeplay.
6. Tighten the lock nut and reinstall the sleeve.
7. After adjustment, check for smooth operation of the throttle lever from fully closed to fully open in all steering positions.

Throttle Inspection

Refer to *Safety Precautions* on page 84 .

1. Check that the throttle assembly is positioned properly and the securing bolts are tight.
2. Check for smooth operation of the throttle lever from fully open to fully closed in all steering positions. If there is a problem, see your Honda dealer.
3. Inspect the condition of the throttle cables from the throttle lever down to the carburetor. If the cable is kinked or chafed, have it replaced.
4. Check the cables for tension or stress in all steering positions.
5. Lubricate the cables with a commercially-available cable lubricant to prevent premature wear and corrosion.