



## Controls & Features


---

### Engine Stop Switch

The engine stop switch (1) is used to stop the engine in an emergency. To operate, slide the switch to the OFF ( ☒ ) position. The switch must be in the RUN ( ○ ) position to start the engine, and it should normally remain in the RUN ( ○ ) position even when the engine is OFF.

If your ATV is stopped with the ignition switch ON ( I ) and the engine stop switch OFF ( ☒ ), the battery will discharge. Turn the ignition switch OFF ( O ) to prevent battery discharge.

### LEFT HANDLEBAR

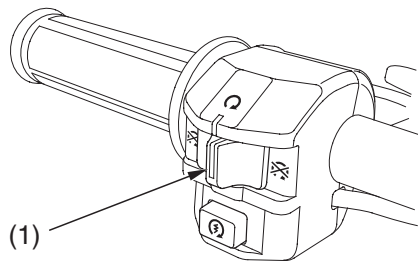

(1) engine stop switch

☒ OFF  
○ RUN

## 22 Indicator & Controls

