

Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL MAINT.			Refer to page		
			REGULAR MAINT. INTERVAL					
			km	1000	2000			
			mi	600	1200			
MONTH	1	6	12					
NOTE	HOURS	20	100	200				
*	FUEL LINE				I	—		
*	THROTTLE OPERATION				I	119		
	AIR CLEANER	NOTE 1			C	C	115 – 118	
	SPARK PLUG				I	I	124	
*	VALVE CLEARANCE				I	I	I	127
	ENGINE OIL				INITIAL=150 km (100 mi), 20 operating hours or 1 month : R REGULAR=Every 1000 km (600 mi), 100 operating hours or 12 months : R		109 – 114	
**	ENGINE OIL STRAINER SCREEN					C	—	
**	ENGINE OIL CENTRIFUGAL FILTER					C	—	
*	ENGINE IDLE SPEED				I	I	I	122
*	SECONDARY AIR SUPPLY SYSTEM					I	—	

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Shop Manual.

** In the interest of safety, we recommend these items be serviced only by your dealer.