

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	→		ODOMETER READING [NOTE (1)]						REFER TO PAGE
			x 1,000 km		1	6	12	18	24	30	
		EVERY	MONTH	x 1,000 mi	0.6	4	8	12	16	20	
DRIVE CHAIN					I, L, EVERY 1,000 km (600 mi)						134
BATTERY					I	I	I	I	I	I	168
BRAKE FLUID	(NOTE 4)				I	I	I	I	I	I	142
BRAKE PAD WEAR					I	I	I	I	I	I	144
BRAKE SYSTEM				I		I		I		I	142—146
* BRAKE LIGHT SWITCH						I		I		I	182
* HEADLIGHT AIM						I		I		I	80
CLUTCH SYSTEM						I		I		I	130
CLUTCH FLUID	(NOTE 4)				I	I	I	I	I	I	130
SIDE STAND						I		I		I	150
* SUSPENSION						I		I		I	148
* NUTS, BOLTS, FASTENERS				I		I		I		I	
** WHEELS/TIRES						I		I		I	
** STEERING HEAD BEARINGS				I		I		I		I	

* Should be serviced by an authorized HONDA dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official HONDA shop manual.

** In the interest of safety, we recommended these items be serviced ONLY by an authorized HONDA dealer.

NOTES:

1. For higher odometer reading, repeat at the frequency interval established here.
2. Service more frequently when riding in dusty areas.
3. Replace every 36,000 km (24,000 mile) or every 2 year whichever comes first.
4. Replace every 18,000 km (12,000 mile) or every 2 year whichever comes first.