

## Rear Suspension

### Tension damping:

To adjust the adjuster to the standard position, proceed as follows :


1. Turn the damping adjuster (1) clockwise until it will no longer turn. This is the full hard setting.
2. The adjuster is set in the standard position when the adjuster is turned counterclockwise 1 turn with aligned the punch marks (2) on the adjuster and the reference mark (3).

To reduce (SOFT) :

Turn the adjuster counterclockwise to SOFT for a light load and smooth road condition.

To increase (HARD) :

Turn the adjuster clockwise to HARD for a firmer ride and rough road condition.

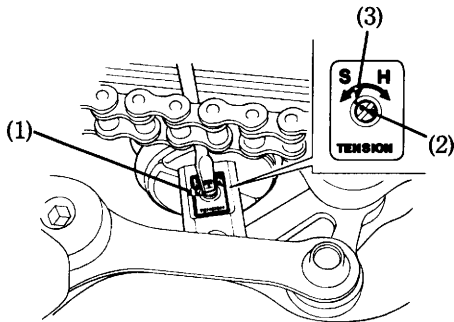

- (1) Damping adjuster      (3) Reference mark  
(2) Punch mark