


## Inspection

The reserve tank is behind the middle fairing.

Check the coolant level in the reserve tank (1) while the engine is at the normal operating temperature with the motorcycle in an upright position. If the coolant level is low, remove the right middle fairing (2) (page 43). Remove the reserve tank cap (5) and add coolant mixture until it reaches the UPPER level mark (3). Do not remove the radiator cap.

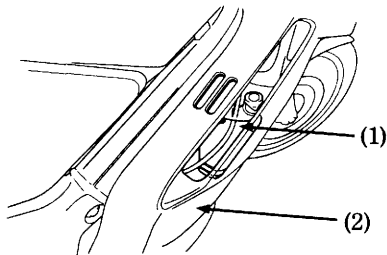


- (1) Reserve tank
- (2) Middle fairing

## ▲ WARNING

- \* Do not remove the radiator cap when the engine is hot. The coolant is under pressure and could scald you.
- \* Keep hands and clothing away from the cooling fan, as it starts automatically.

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your authorized Honda dealer for repair.

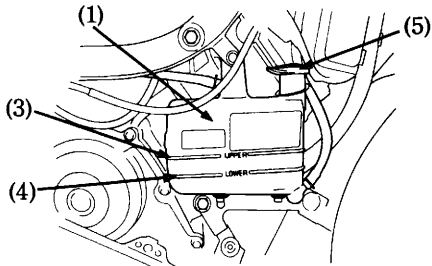

- (3) UPPER level mark
- (4) LOWER level mark
- (5) Reserve tank cap