


WHEEL REMOVAL

(Refer to the maintenance precautions on page 60).

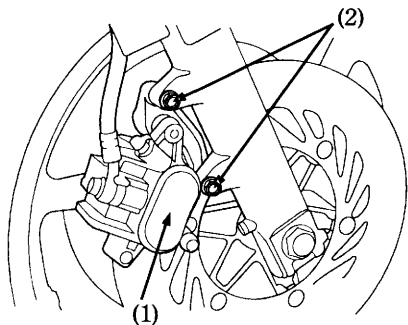

- (1) Brake caliper assembly
- (2) Fixing bolts

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the right caliper assembly (1) from the fork leg by removing the fixing bolts (2).

CAUTION:

- * To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.