

FUSE REPLACEMENT

(Refer to the maintenance precautions on page 60).


The main fuse (1), located near the negative (-) terminal lead behind the left side cover, is:

30A (Main fuse)

The spare main fuse (2) is located near the negative (-) terminal lead.

The fuse box is located inside of the right side fairing (5). The specified fuse are:

10A and 20A

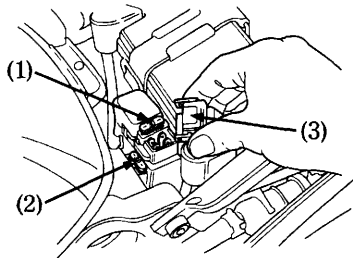


- (1) Main fuse (3) Wire connector
(2) Spare main fuse

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

CAUTION:

*** Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace the main fuse (1), remove the seat (page 40), disconnect the wire connector (3) of the starter magnetic switch and pull out the old fuse. Install a new fuse and reconnect the connector.

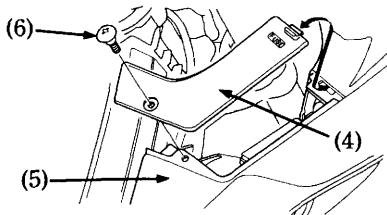

- (4) Right inner panel (6) Screw
(5) Right side fairing