

## Removal:

1. Removal can be done in the reverse order of installation.

Tighten the rear grab rail mounting bolts (2) securely.

TORQUE: 35 N·m (3.5 kg-m , 25 lb-ft)

### **▲WARNING**

- \* **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. The grab rail could come off easily and result in serious injury if the assembly is not made properly.**

2. Install the seat properly (see page 39).