


Battery Removal

1. Remove the seat (page 58).
2. Remove the two clips A (1), then remove the battery cover (2).
3. Release the rings and remove the rubber band (3).
4. Disconnect the negative (-) terminal lead (4) from the battery first, then disconnect the positive (+) terminal lead (5).
5. Pull out the battery (6) from the battery box.

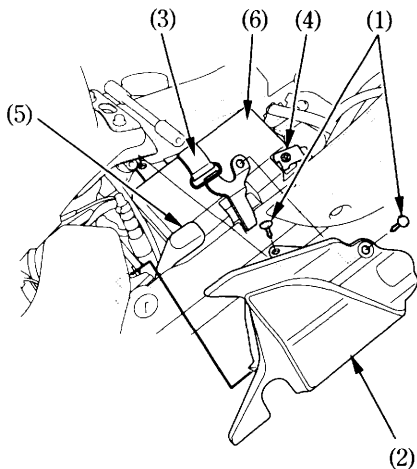

- (1) Clips A
- (2) Battery cover
- (3) Rubber band
- (4) Negative (-) terminal lead
- (5) Positive (+) terminal lead
- (6) Battery