

Instruments (Continued)

Clock (12-hour display) & Trip time & Handle grip heater level



Clock (12-hour display) & Trip time & Handle grip heater level

You can switch the modes between clock and trip time mode by pressing and holding **B** button.

Clock Handle grip heater level



Press and hold **B** button.

The heater level is displayed for about 5 seconds when the handle grip heater is on or its level is changed.

Clock

To set the clock: P.30

Trip time

Displays the time elapsed since the engine was started.

Display range: 0:00 to 19:59 (hours:minutes)
The display returns to 0:00 when the time elapsed exceeds 19:59.

Handle grip heater level

When you operate the handle grip heater, the clock or trip time automatically switch to the indication for the heater level. The display will return to the ordinary mode after about 5 seconds.

To operate the handle grip heater:

P.40