

## Instruments *(Continued)*

If the ignition switch is turned off, the button is not pressed for about 30 seconds, or the handle grip heater level is changed, the control is automatically switched from the setting mode to the ordinary display. Only items that have been set are applied.

### 1 Clock setting:

- 1 Turn the ignition switch ON.
- 2 Press and hold **A** button and **B** button, the hour digits start flashing.
- 3 Press **A** button until the desired hour is displayed.
  - ▶ Press and hold **A** button to advance the hour fast.



- 4 Press **B** button. The minute digits start flashing.



- 5 Press **A** button until the desired minute is displayed.
  - ▶ Press and hold **A** button to advance the minute fast.



- 6 Press **B** button. The clock is set, and then the display moves to the backlight brightness adjustment.