

(TCS OFF) **TCS (Traction Control System) OFF indicator**

Comes on when the TCS is turned off.

(TCS) **TCS (Traction Control System) indicator**

- Comes on when the ignition switch is turned on. Goes off when your speed reaches approximately 10 km/h (6 mph) to indicate TCS is ready to work.
- Blinks when TCS is operating.


If it comes on while riding:  P.98

 High coolant temperature indicator

Comes on briefly when the ignition switch is turned on.

If it comes on while riding:  P.95

 Right turn signal indicator


HISS indicator  P.117

- Comes on briefly when the ignition

switch is turned on with the engine stop switch in the \odot (Run) position.

Goes off if the ignition key has the correct coding.

- Flashes every 2 seconds for 24 hours when the ignition switch is turned off.

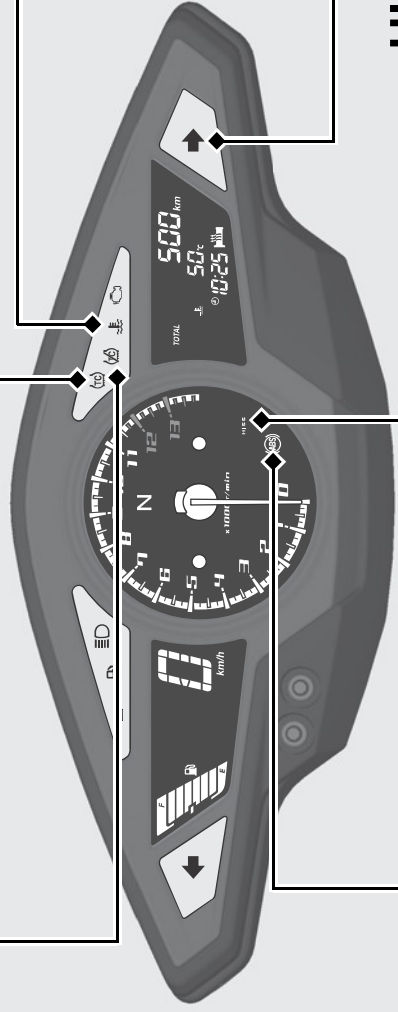

(ABS) **ABS (Anti-lock Brake System) indicator**

Comes on when the ignition switch is turned on. Goes off when your speed reaches approximately 10 km/h (6 mph).

If it comes on while riding:  P.97