


8. Install the single seat cowl in the same procedures of the rear seat installation.

➔ P. 64

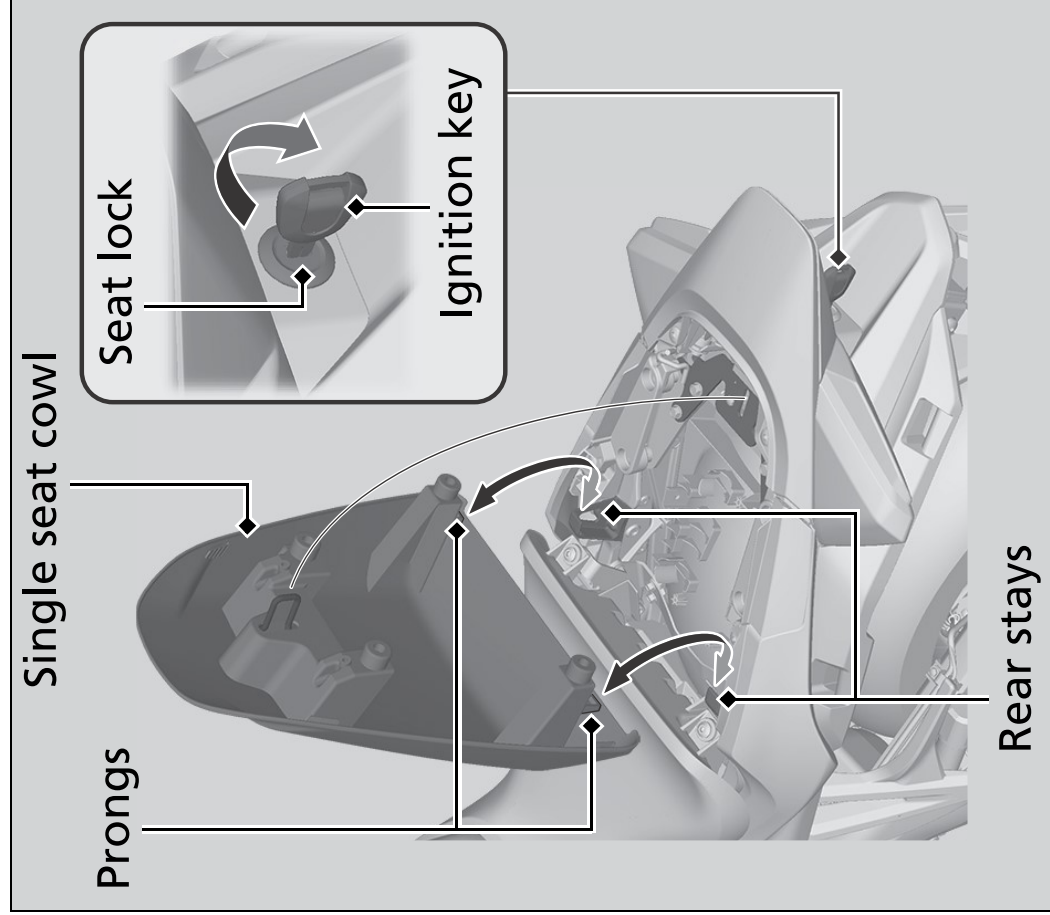

Make sure that the single seat cowl is locked securely in position to pull it up lightly. The seat locks automatically when closed. Take care not to lock your key in the compartment under the single seat cowl.

■ Removal of Single Seat Cowl

Removal can be done in the reverse order of installation.

► Tighten the grab rail mounting bolts.

Torque: 27 N·m (2.8 kgf·m, 20 lbf·ft).

Always reinstall the grab rails when reinstalling the rear seat.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. The grab rail could come off easily and result in serious injury if not assembled properly.