

Clip

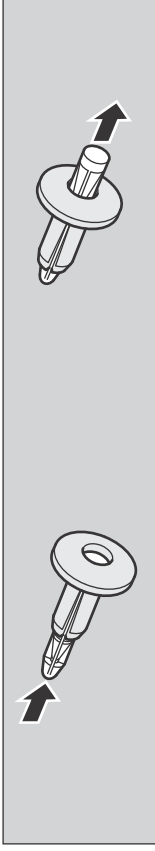
The clip must be removed to remove the under cowl.

■ Removal

1. Press down on the centre pin to release the lock.
2. Pull the clip out of the hole.



■ Installation

1. Push the bottom of the centre pin.
- 
2. Insert the clip into the hole.
 3. Press down on the centre pin to lock the clip.