

Battery Cover

The battery cover must be removed to remove the battery, to service the main and fuse box fuses.

■ Removal

1. Remove the front seat. ► P. 65
2. Remove the clips.
3. Remove the battery cover.

■ Installation

Install the parts in the reverse order of removal.

