


Electrical Trouble ► Burned-out Light Bulb

4. Turn the socket counterclockwise and pull it out.
5. Slightly press the bulb in and turn it counterclockwise.

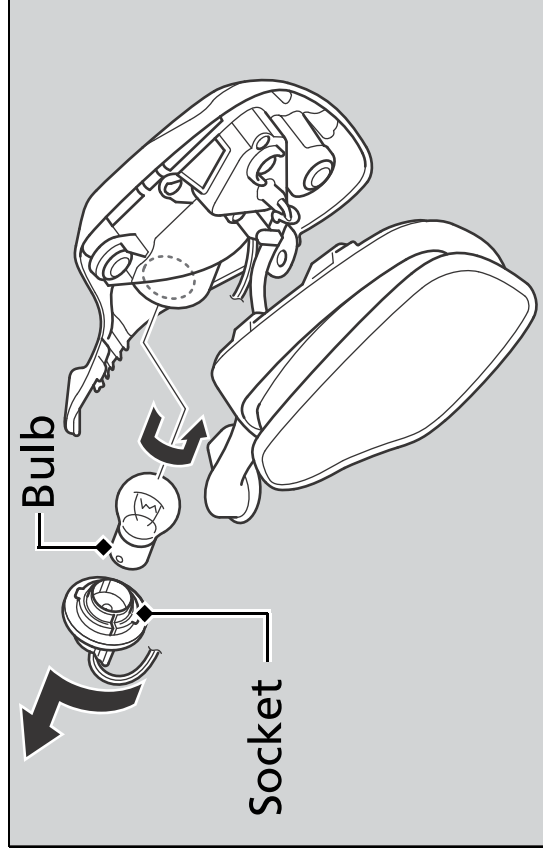

6. Install a new bulb in the reverse order of removal.
 - Use only the amber bulb.
7. Reinstall the cover and install the screw and tighten.

Torque: 1.0 N·m (0.1 kgf·m, 0.7 lbf·ft).