



## Instruments *(Continued)*

### Fuel mileage meter

**[B]** button switches between fuel mileage meters and fuel consumption meter.

When the odometer or tripmeter A is displayed, press **[B]** button to select any mode of the fuel mileage meter. **➔ P.23**

The average fuel mileage and fuel consumption will be based on tripmeter A.

- Current fuel mileage:  
Current or instant fuel mileage. If your speed is 1 km/h (0.6 mph) or less, “-.-.-” is displayed.
- Average fuel mileage:  
Average fuel mileage since tripmeter A was reset. When “-.-.-” is displayed, go to your dealer for service.
- Fuel consumption:  
Total fuel consumption since tripmeter A was reset. When “-.-.-” is displayed, go to your dealer for service.  
**▶ To reset the average fuel mileage and fuel consumption: ➔ P.25**