


Headlight Bulb

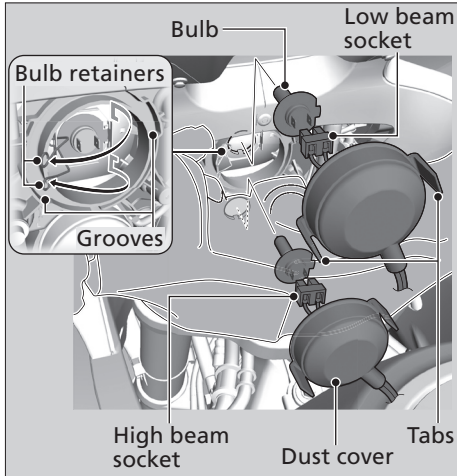

Electrical Trouble ► Burned-out Light Bulb

The high and low beam headlight bulbs replacement can be done in the same way.

1. Remove the dust cover.
2. Pull the socket off the bulb without turning it.
3. Unhook the bulb retainers and pull out the bulb without turning it.
4. Install a new bulb and parts in the reverse order of removal.
 - Make sure the dust cover tabs and headlight housing grooves are aligned.
 - Be careful not to confuse the high beam and low beam headlight sockets.

Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol.