

- 5 Press **SET** button. The trip distance is set, and then the display will return to the ordinary display.

The trip distance will not be reset when you complete setting of the mileage countdown by pressing **SET** button only or when you set the trip distance to the same as the current distance.

When entering the setting mode using “km” unit after setting the trip distance to “625 mile” or more with the unit set to “mile”, “---.” will appear because the distance exceeds the maximum display range.

Press **SEL** button to display “000.0”, and then set the trip distance again if necessary. Pressing **SET** button while “---.” is displayed will return the display to the ordinary display and keep the previous trip distance.