

## Handle Grip Heater *(Continued)*

### To operate the handle grip heater


- 1 Start the engine. ▢ P. 45
- 2 Press the handle grip heater switch. The handle grip heater is on.
  - ▶ The status icon will be appeared on the display when the handle grip heater operates.
- 3 Select the heater level by pressing the switch.
  - ▶ The clock or trip time on the display automatically switch to the indication of the heater level. The indication will return to the ordinary mode after blinking for about 5 seconds.
  - ▶ Do not leave the handle grip heater in the high position for a long time on a warm day.
- 4 To turn off the heater, press the switch until the status icon on the display is disappeared. Also to turn off, press and hold the switch.

Do not use the handle grip heater with the engine at idle for a long time. It may result in

a low (or dead) battery.

Maintains the selected level when the ignition switch is turned off.

- ▶ The heater level is not changed if the ignition switch is turned to the OFF position within 5 seconds after heater level change.

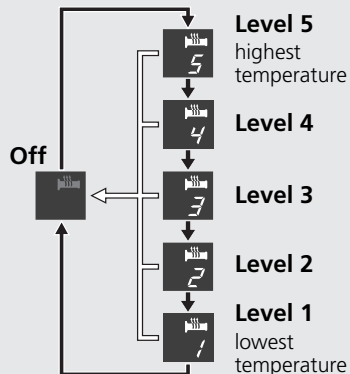

→ Press the handle grip heater switch.

⇨ Press and hold the handle grip heater switch.