

Honda selectable torque control (Torque Control)

Torque Control level (engine power control) can be selected or turned on/off.

- ▶ Do not operate the Torque Control switch while riding. Stop the motorcycle first and the turn off or on and select the desired level.
- ▶ The Torque Control setting cannot be changed or turned off when the system is activated (Torque Control indicator flashing).
- ▶ Each time the ignition switch is turned to the ON position, the Torque Control level will automatically be set to level 2 (max).
- ▶ When the Torque Control is turned from the off position to the on position, it will automatically be set to level 2 (max).


Torque Control level setting

The level can be selected by pressing the Torque Control switch.

- ▶ Level 2 is the maximum Torque Control level
- ▶ Level 1 is the minimum Torque Control level

Torque Control on and off

Torque Control can be turned on and off by press and hold the Torque Control switch.

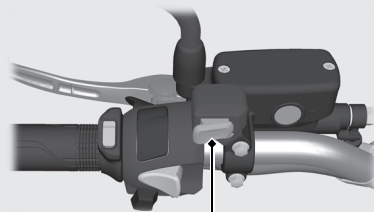

Torque Control switch