



## Removing & Installing Body Components ▶ Battery Cover

When setting the low seat position:

1. Remove the front seat. ▶ P. 69
2. Remove the clips.
3. Move the right rib of the battery cover to the inside of the right adjust plate (1).

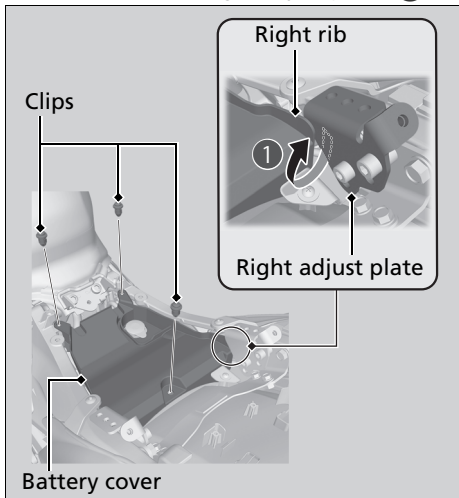

4. While pressing down the rear left part of the battery cover (2), pull up the right part of it and remove the battery cover to the right side (3).

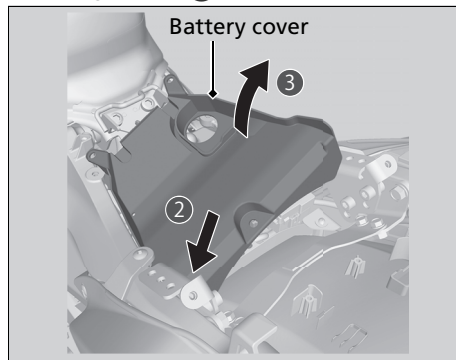

### Installation

Install the parts in the reverse order of removal.