


Engine Oil ► Changing Engine Oil & Filter

- Remove the oil filter with a filter wrench from the right side and let the remaining oil drain out.

► Discard the oil and oil filter at an approved recycling centre.

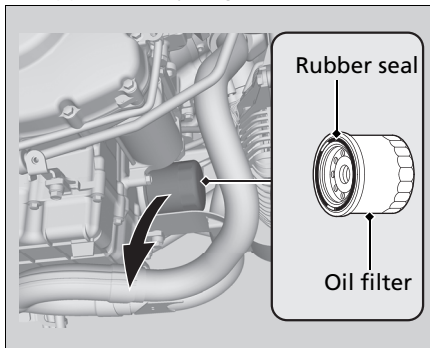

Maintenance

- Apply a thin coat of engine oil to the rubber seal of a new oil filter.
- Install the new oil filter and tighten.

Torque: 26 N·m (2.7 kgf·m, 19 lbf·ft).

- Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 30 N·m (3.1 kgf·m, 22 lbf·ft).

- Fill the crankcase with the recommended oil (► P. 60) and install the oil fill cap.

Required oil

When changing oil & engine oil filter:

3.1 litres (3.3 US qt, 2.7 Imp qt)

When changing oil only:

2.9 litres (3.1 US qt, 2.6 Imp qt)

- Check the oil level. ► P. 75
- Check that there are no oil leaks.
- Install the right under cover.