



## Brakes/Clutch ▶ Adjusting the Brakelight Switch

## Adjusting the Brakelight Switch

Check the operation of the brakelight switch. Hold the brake light switch and turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

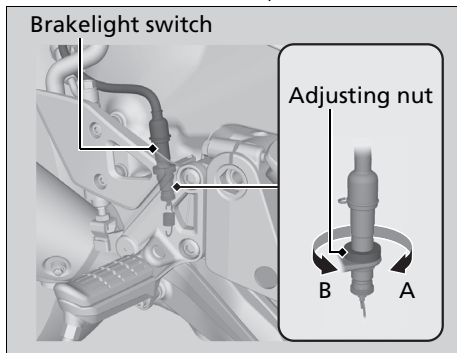

## Checking the Clutch Fluid

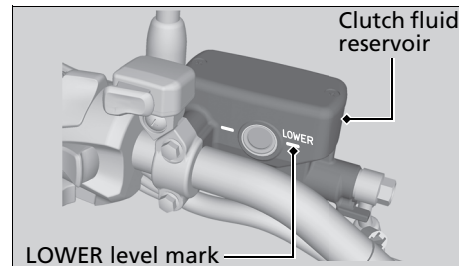

1. Place your motorcycle in an upright position on a firm, level surface.
2. Check that the clutch fluid reservoir cap is horizontal and that the fluid level is above the LOWER level mark.

If the fluid level is low or if you find fluid leaks, or deterioration or cracks in the hoses and fittings, have the clutch system serviced by your dealer.