

## Drive Chain ▶ Adjusting the Drive Chain Slack

5. Inspect the sprockets. **▶** P. 61
6. Clean and lubricate the drive chain.  
**▶** P. 62

## Adjusting the Drive Chain Slack

Adjusting the chain requires special tools.  
Have the drive chain slack adjusted by your dealer.

1. Stop the engine. Place the transmission in Neutral.
2. Place your motorcycle on the side stand on a level surface.
3. Loosen the bearing holder pinch bolt.
4. Turn the bearing holder clockwise or counterclockwise to obtain the proper chain slack with the pin spanner and extension bar.

5. Tighten the bearing holder pinch bolt to the specified torque.

**Torque:** 74 N·m (7.5 kgf·m, 55 lbf·ft).

If a torque wrench was not used for this installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

6. Check drive chain slack. **▶** P. 85

