

## Other Adjustments ► Changing the Front Seat Height

### Changing the Front Seat Height

The front seat can be changed to one of two positions according to your preference. To change the seat height, use the proper hex wrench.

In the interest of safety, we recommend that you have your dealer perform the adjustment.

1. Remove the front seat. ► P. 69
2. Remove the socket bolts A and seat adjust plates.
3. Move the adjust plates and install the socket bolts A in the mounting holes for your preferred seat position (high or low), and then tighten them.

**Torque:** 22 N·m (2.2 kgf·m, 16 lbf·ft).

4. If you change the front seat height from high position to low position, remove the socket bolts B/set collars A and socket bolt C/set collar B from the seat rail and front stay. (The socket bolts B/set collars A and socket bolt C/set collar B are not required for the low position.)

► Make sure to install the socket bolts B/set collars A and socket bolt C/set collar B when the seat height is returned to the high position. Tighten the socket bolts B and socket bolt C if reinstalling.

**Torque:** 12 N·m (1.2 kgf·m, 9 lbf·ft).