

Troubleshooting

Engine Will Not Start (HISS indicator stays on)	P. 98
Overheating (High coolant temperature indicator is on)	P. 99
Warning Indicators On or Flashing	P. 100
Low Oil Pressure Indicator	P. 100
PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL).....	P. 100
ABS (Anti-lock Brake System) Indicator....	P. 101
Torque Control Indicator	P. 102
Other Warning Indications	P. 103
Fuel Gauge Failure Indications	P. 103
Handle Grip Heater Failure Indication.....	P. 103
Tyre Puncture	P. 104
Electrical Trouble	P. 111
Battery Goes Dead	P. 111
Burned-out Light Bulb	P. 111
Blown Fuse.....	P. 114