


Electrical Trouble ► Blown Fuse

## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses”. ▣ P. 59

### ■ Fuse Box Fuses

Troubleshooting

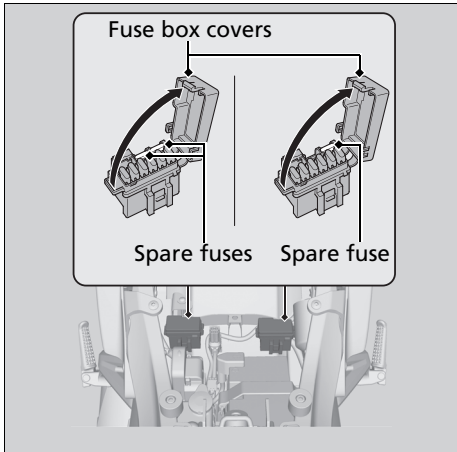

1. Remove the battery cover. ▣ P. 72
2. Open the fuse box covers.
3. Pull the fuses out with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the fuse box covers.
5. Reinstall the battery cover.