


Instruments and Indicator Lights

The instruments are grouped together above the headlight case. The indicator lights are located between the instruments.

- | | |
|--------------------------------|-----------------------------------|
| (1) Tripmeter | (6) High beam indicator |
| (2) Speedometer | (7) Neutral indicator |
| (3) Odometer | (8) Right turn signal indicator |
| (4) Left turn signal indicator | (9) Tachometer |
| (5) Oil pressure warning light | (10) Tachometer red zone |
| | (11) Coolant temperature gauge |

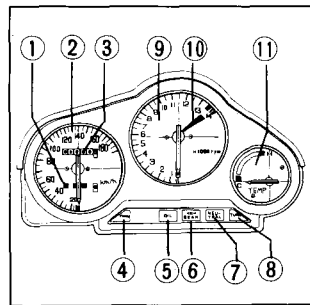

Coolant Temperature Gauge

When the needle reaches the blue mark, the engine is warm enough to ride. Normal operating temperature is within the green band. If the needle enters the red zone, stop the engine and check the reserve tank coolant level. Read pages 56—59 and do not drive the motorcycle until the problem has been corrected.

CAUTION: Exceeding maximum running temperature may cause serious engine damage.

