


Ignition Switch

The ignition switch (1) is located directly below the indicator panel.
OFF: All electric circuits open. Engine cannot be started. Key can be removed.

ON: All electric circuits closed. Engine and light can be operated. Key cannot be removed.

P (PARKING): All electric circuits open except for taillight and position light. Key can be removed.

LOCK (STEERING LOCK): See page 21.

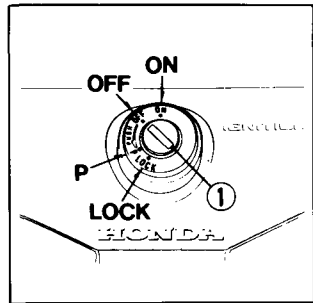

Headlight Switch

The headlight switch (1) has three positions; "H", "P" and "OFF" marked by a dot to the right of "P".

H: Headlight, taillight, position light and meter lights on.

P: Position light, taillight and meter lights on.

OFF (dot): Headlight, taillight, position light and meter lights off.

