

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓	ODOMETER READING [NOTE (3)]							PAGE
			EVERY	1,000 km (600 mi)	6,000 km (3,750 mi)	12,000 km (7,500 mi)	18,000 km (11,250 mi)	24,000 km (15,000 mi)	30,000 km (18,750 mi)	
DRIVE CHAIN			EVERY 1,000 km (600 mi)	I	I	I	I	I	I	50
BATTERY				I	I	I	I	I	I	53
BRAKE FLUID	2 YEARS	*R		I	I	*R	I	I	*R	39
BRAKE SHOE/PAD WEAR				I	I	I	I	I	I	40, 42
BRAKE SYSTEM			I		I		I		I	39
* BRAKE LIGHT SWITCH					I		I		I	60
* HEADLIGHT AIM					I		I		I	
CLUTCH SYSTEM					I		I		I	38
CLUTCH FLUID	2 YEARS	*R		I	I	*R	I	I	*R	38
SIDE STAND					I		I		I	42
* SUSPENSION					I		I		I	
** NUT, BOLT, FASTENERS			I		I		I		I	
** WHEEL					I		I		I	
** STEERING HEAD BEARING			I		I		I		I	

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

- NOTES: (1) Service more frequently when riding in dusty areas.
 (2) Service more frequently when riding in rain or at fully throttle.
 (3) For higher odometer reading, repeat at the frequency interval established here.