

## MAINTENANCE

### Engine Oil

Check engine oil level each day before operating the motorcycle.

1. Put the motorcycle on its center stand on level ground.
2. Check the oil level in the oil inspection window (3) on the lower right side of the crankcase cover. The oil level should be between the upper (1) and lower (2) level marks. If the inside of the window is dirty, turn the wiper (4) to clean the window.
3. If required, remove the filler cap (5), add the specified oil up to the upper level mark, then reinstall the filler cap.

**CAUTION:** Running the engine with insufficient oil can cause serious engine damage.

