

Perform the oil change in the following manner. Drain the oil while the engine is still warm.

1. Remove the oil filler cap (5), engine bottom oil drain plug (6) and drain the the oil.
2. Remove the lower cowling. Remove the oil filter (7) with a filter wrench and let the remaining oil drain out. Discard the oil filter.
3. Make sure that the sealing washers on the drain plugs are in good condition and install the plugs.

