

4. After completely draining the oil, apply a thin coat of engine oil to the new oil filter rubber seal (8) and install the new oil filter.
Oil filter torque: 15–20 N·m (1.5–2.0 kg·m, 11–14 ft·lb)
 5. Fill the crankcase with 2.5 liter (2.6 U.S.qt., 2.2 Imp.qt.) of the recommended oil (page 22).
 6. Start the engine and let it idle for 2–3 minutes, then stop the engine.
 7. Make sure that the oil level is at the upper level mark on the dipstick.
 8. Make sure that there are no oil leaks.
- CAUTION:** Change oil more frequently than recommended on page 29, depending upon the severity of dust conditions.

