

Air Cleaner Servicing

The air cleaner should be serviced at regular intervals (Page 29). When riding in dusty areas, more frequent service may be necessary.

1. Remove the lower cowling.
2. Turn the fuel valve OFF. (2)
3. Remove the seat and fuel tank mounting bolt (3).
4. Remove the bolt attaching the fuel valve and disconnect the fuel line and vacuum tube from the carburetor.

NOTE:

- * Do not remove the fuel line between the fuel valve (2) and fuel tank (1). Failure to do so causes the gasoline to flow out of the fuel tank.

