

5. Remove the three bolts (4) and the air cleaner cover (5).
6. Take out and discard the air cleaner element (6).
7. Install the new element and air cleaner cover.

**NOTE:**

- \* Reinstall the fuel line and vacuum tube properly.

