

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Disconnect the speedometer cable (1) by removing the speedometer cable set screw (2).
3. Remove the right caliper assembly (4) from the fork leg by removing the fixing bolts (5).

CAUTION: Support caliper assembly so that it doesn't hang on the hose. Do not twist the brake hose.

